

LAURAMERONI d e s i g n . c o I I e c t i o n

_dimensions

wall panel - pannello boiserie -wandpaneele - panneau boiserie - Стеновая панель



_dimensions limits



wall panel - pannello boiserie -wandpaneele - panneau boiserie - Стеновая панель

Dimensions in centimeters and inches.

The right to discontinue and make changes is reserved.

This information is based on the latest product information available at the time of printing.


technical sheet scheda tecnica

rel. 12/2023



_dimensions

wall panel system with hinged doors - sistema boiserie con porte battenti wandpaneele system mit flügeltüren - système boiserie avec portes battantes - система стеновых панелей с распашными дверями

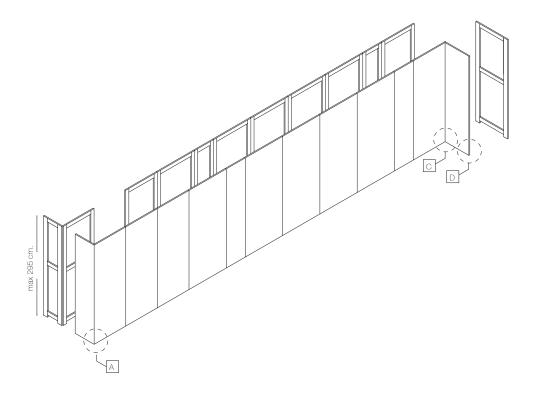

Dimensions in centimeters and inches.


The right to discontinue and make changes is reserved.

This information is based on the latest product information available at the time of printing.

technical sheet scheda tecnica rel. 12/2023

LAURAMERONI d e s i g n - c o I I e c t i o n

_dimensions

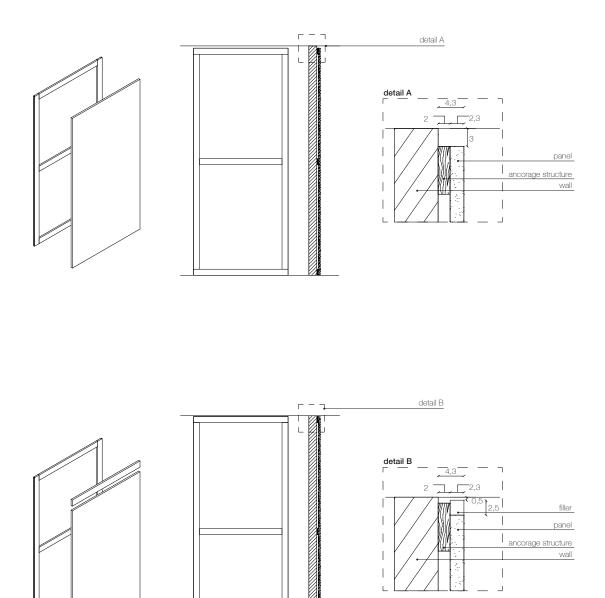


Dimensions in centimeters and inches.


The right to discontinue and make changes is reserved.

This information is based on the latest product information available at the time of printing.

LAURAMERONI d e s i g n - c o I I e c t i o n


_dimensions

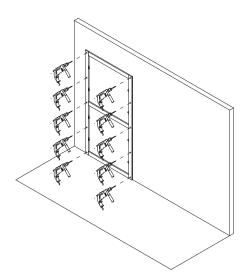


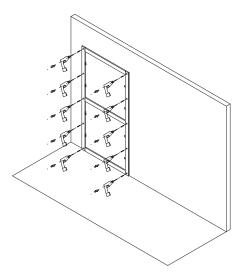

_1 Drill the frame and the wall. Insert in the wall the plugs suitable for the existent wall.

_2 Screw the frame to the wall.

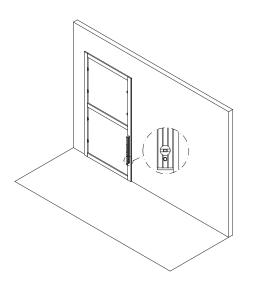

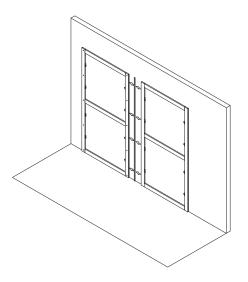

_4 Place the alignment band into the proper miling on the frame. Place the second frame mortising it, throught the proper milling, with the first one, already fixed to the wall.

_3 Check the vertical alignment.


-Dimensions in centimeters and inches.


The right to discontinue and make changes is reserved. This information is based on the latest product information available at the time of printing.

technical sheet scheda tecnica rel. 12/2023 boiserie juta laurameroni 5 • 9


LAURAMERONI d e s i g n . c o I I e c t i o n

_dimensions

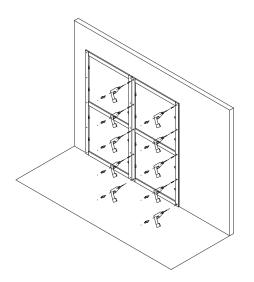

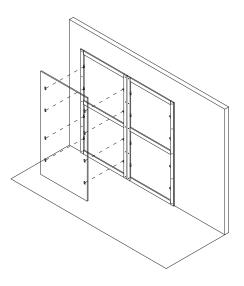

_5 Repeat the operations nr. 1 - 2 - 3 - 4 for all the frames to be installed.

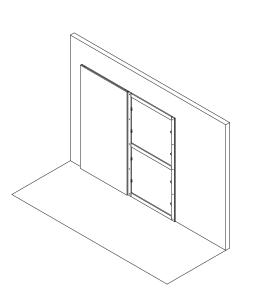

_6 Hook the wall panel through the pre-mounted frame supports and the respective ones pre-installed on the panel.

_7 Proceed with the next panels.

Dimensions in centimeters and inches.

The right to discontinue and make changes is reserved.

This information is based on the latest product information available at the time of printing.

technical sheet scheda tecnica rel. 12/2023